


# Art History Smart Classrooms: A Quick Guide to the Technology.

Step 1.

Turn on the computer by pressing the power button on the back of the computer. See below.

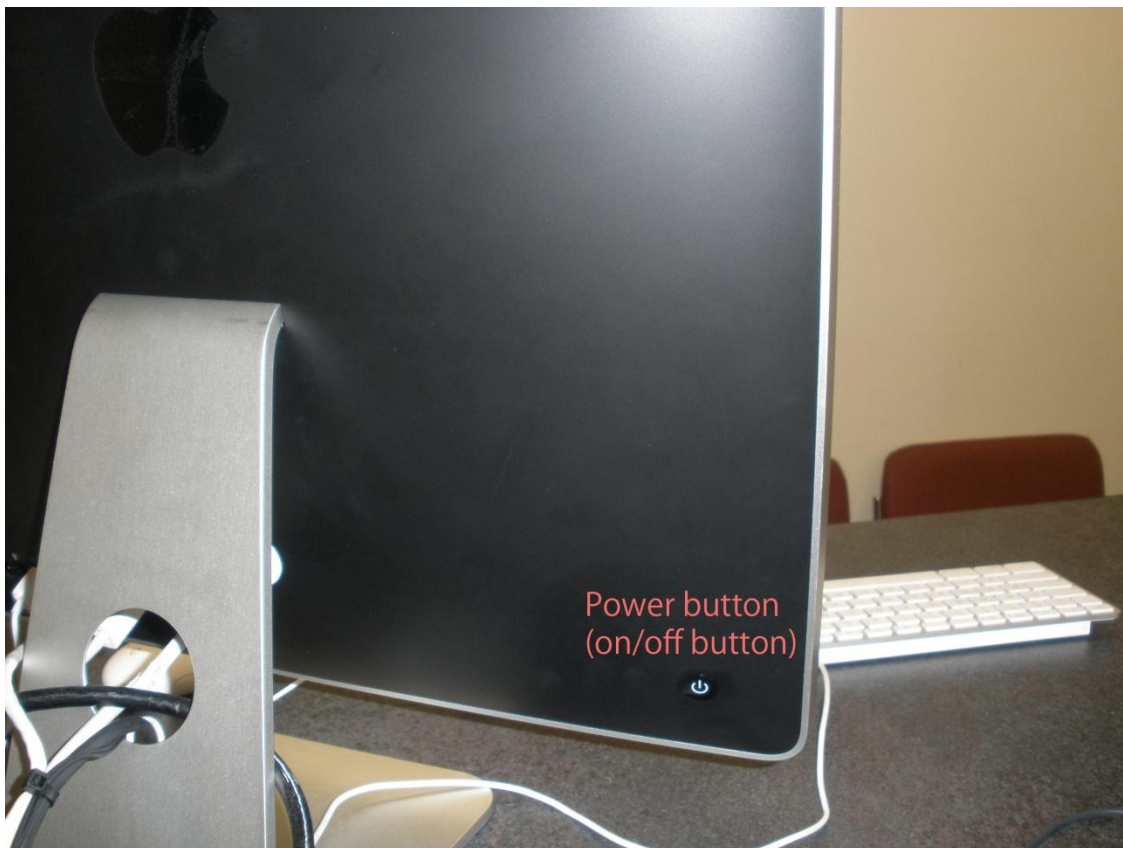

Step 2.


Go to the wall plate and press the power button. That will turn on the data projector.



It will take 30 seconds before the data projector in the ceiling reaches full brightness.

If the image that is initially displayed is not the computer image, make sure to press the button marked “comp” under the “source” section of the wall plate.

This will call up the computer display. Likewise, if you mean to show a video and the projector is showing the computer display, press the button marked “video” to change what is displayed on the projector.

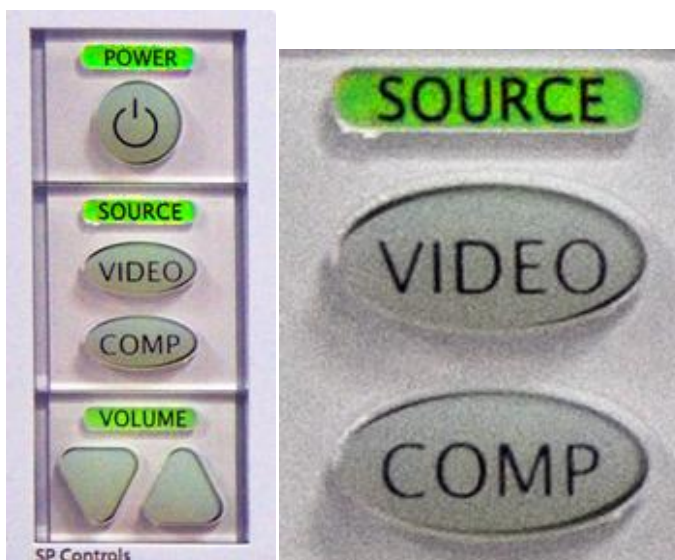


### Step 3.

If you need to adjust the volume of any audio playing (e.g. Web page audio file, DVD or CD), use the “down” & “up” buttons on the “volume” section of the wall plate to adjust the audio levels.



Below is an image of what the back of the computer should look like. If any of these cables is accidentally disconnected the system will not work as designed. Most problems stem from simple things like a disconnected cable. Please use this image as a reference in troubleshooting.

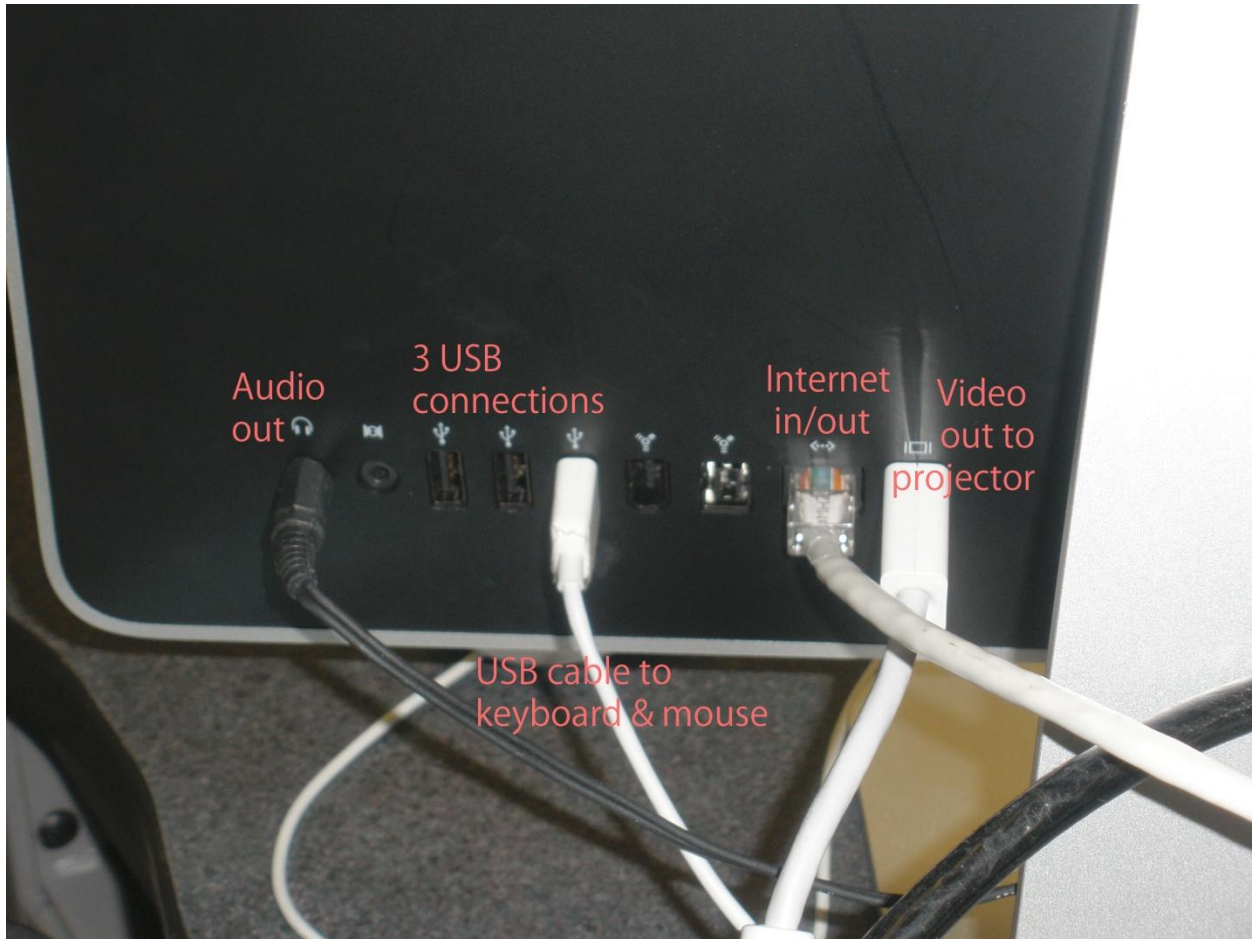

Once you are finished with your presentation please go to the wall plate and turn off the data projector by quickly pressing the power button twice.



As a safeguard against accidentally turning off the projector, it will not shut down by pressing the power button only once. The projector will prompt you on screen to press the power button again to confirm your intention.

Pressing it again while the prompt is on screen ensures that you actually intend to turn off the projector.